



user manual



# enjoy

your music

**RC826**

收音/前置六碟播放组合

tuner / in-dash 6 disc changer combination

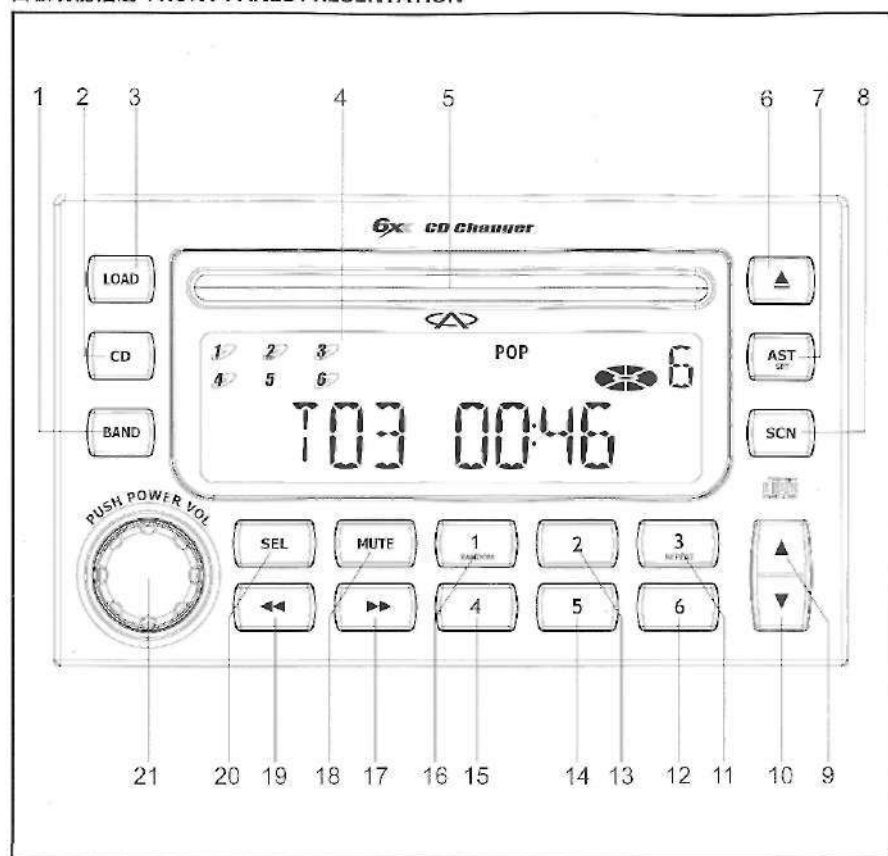 
使用说明书

user manual

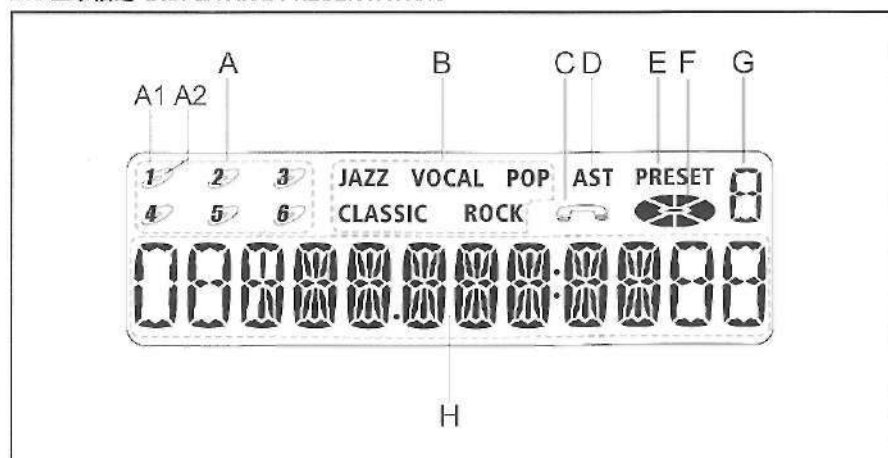 
**6x CD Player**

handling a complex world

# 面板功能描述 FRONT PANEL PRESENTATION



# LCD显示描述 DISPLAYING PRESENTATION



## CONTENTS

FRONT PANEL PRESENTATION .....	9
DISPLAY PRESENTATION .....	9
CLOCK SETTING .....	9
AUDIO .....	10
RADIO .....	10
CD PLAYER .....	11
SET UP .....	12
TROUBLE SHOOTING .....	13

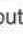 
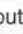 
## FRONT PANEL PRESENTATION

For illustration, see page 3.

- 1 **BAND** ..... To select band
- 2 **CD** ..... CD player mode
- 3 **LOAD** ..... Loading disc
- 4 Displayer
- 5 CD opening
- 6 **▲** ..... Eject CD
- 7 **AST** ..... Autostore
- SET** ..... Long press(more than 2 sec.):  
enter set up mode.
- 8 **SCN** ..... Tuner's frequency scan(tuner)/  
CD's track scan(CD player)
- 9 **▲** ..... Higher frequency (tuner)  
Next track (CD player)
- 10 **▼** ..... Lower frequency (tuner)  
Previous track (CD player)
- 11 **3** ..... Preset button 3(tuner)  
Select No.3 disc to play(CD player)
- REPEAT** ..... CD repeat track on/off
- 12 **6** ..... Preset button 6(tuner)  
Select No.6 disc to play(CD player)
- 13 **2** ..... Preset button 2(tuner)  
Select No.2 disc to play(CD player)
- 14 **5** ..... Preset button 5(tuner)  
Select No.5 disc to play(CD player)
- 15 **4** ..... Preset button 4(tuner)  
Select No.4 disc to play(CD player)
- 16 **1** ..... Preset button 1(tuner)  
Select No.1 disc to play(CD player)
- RANDOM** .... CD random track on/off
- 17 **▶▶** ..... Tuning to higher frequency  
(Radio)  
Fast forward(CD player)
- 18 **MUTE** ..... Set mute
- 19 **◀◀** ..... Tuning to lower frequency  
(Radio)  
Fast Rewind(CD player)
- 20 **SEL** ..... Audio setting
- 21 ..... Power on/off  
Volume adjust (turning)

## DISPLAYER PRESENTATION

For illustration, see page 3.

- |    |   |
|----|---|
| A  | Magazine state  |
| A1 | Tray Number   |
| A2 | Disc in or not<br>with  displayed: disc in<br>without  displayed: no disc |
| B  | Audio mode  |
| C  | Telephone in(no function in this version)   |
| D  | Autostore   |
| E  | Preset (radio)  |
| F  | CD playing logo(CD player)  |
| G  | Current playing preset station<br>(Radio)<br>Current playing disc<br>(CD player)  |
| H  | Main display area<br>Current playing station<br>frequency(radio)<br>Current playing track number,<br>played time(CD player)<br>Telephone in number-- <i>this function is invaluble for this version.</i>                                    |

## CLOCK SETTING

- Press **SET** for more than 2 seconds to enter the SETUP menu.
- Press **▲** until you reach the option 'TIME'.
- Press **SET** to alter the Choice to '12H' or '24H'.
- Press **▲** to select Hour digit
  - Display shows e.g. '0000' (24 hour format) or 'AM 12:00' (12 hour format).
  - Hour digit start flashing.
- Press **SET** to adjust the Hour digit
- Press **▲** to select Minute digit
  - Minute digit start flashing.
- Press **SET** to adjust the Minute digit
- Press **▼** again back to Hour digit adjusting.
  - The clock starts operating from the selected time.
- Press **SET** for more than 2 seconds to leave the SETUP menu.
  - 10 seconds after any key operation, the display will always show the time when clock mode is activated.

## AUDIO

### ON / OFF

- Press to switch on or off the set.

### VOLUME

- Turn this knob to adjust the volume.
- Please make sure you can still hear the traffic (horns, sirens.....)

### AUDIO SETTING

- Press **SEL** button to enter audio setting mode.
- Select the desired option to adjust.
- Turning the ON/OFF knob to setting the selected option:

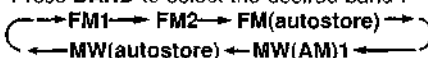 
- BASS (low notes)(-7, +7)
- TREBLE (high notes)(-7, +7)
- BAL (left-right)(7--, 0, --7)
- FADER (rear-front)(7\_, -0-, '7')
- LOUD (OFF, LOW, MID, HIGH)
- Sound style(JAZZ, VOCAL, POP, CLASSIC, ROCK)

- After 5 seconds the display goes back to the last mode of operation.

**NOTE:** You can only adjust the "BAL", "FADER" and "LOUD" audio mode if not in the "BAL-TRE" mode.

## RADIO

### WAVEBAND

- Press **BAND** to select the desired band :  


### Frequency scan(SCN)

Frequency scan allows you to listen to each located station on the current band for about 10 seconds

- Press **SCN** to activate/deactivate Frequency scan.

### Frequency sensitive(only in FM band)

- Switch between local/distance tuning mode. Refer to option "LO/DX" of "SETTING UP".

### AUTO SEARCHING

- Press **◀** button to tune to a station of a lower frequency or  
▶ to a higher frequency.
- To search for another station, press button **◀** or **▶** again.

### Manual tuning (if you know the frequency of the required station)

- Switch to manual tuning mode(refer to "TUN" option of "SETTING UP", and setting the value as "MAN", set will keep in manual tuning mode until you set it back to "AUTO")
- Press **◀** to tune to a station of a lower frequency or  
▶ to a higher frequency.

### Automatically storing stations (AUTO-STORE)

You can automatically store 6 strongest FM stations on the FM AST band or 6 strongest MW (AM) stations on the MW(AM) AST band. When you use Auto Store, the new stations replace any stations previously stored in the FM AST band or the MW(AM) AST band.

- Press **AST** to activate autostore or
- The set gives a beep and then mutes, the display is blinking.
- When it has finished, you hear a beep followed by the station stored on preset 1-6, and the display stops blinking.
- Sometimes it may not be possible to find 6 stations.

## PRESET STATIONS(1-6)

### Manually storing stations in a preset

Six stations per band can be stored and recalled using the preset buttons (1 to 6)

- Tune in to the desired station.
- Press the desired preset button (1 to 6) for more than 2 seconds(till you hear a "beep") to store the current tuned station into.

### Recalling a preset

- Press the desired preset button (1 to 6) to recall the stored station.

### Switch back to radio mode from CD player mode

- You can switch back to radio mode by pressing **BAND** button, and then select the desired band.

## CD PLAYER

### CD PLAYBACK

- Press **CD** button, to enter the 6 discs CD player mode.
- Displayer shows:
  - Storage state,
  - Audio mode(if selected),
  - CD playing logo,
  - Current playing disc number,
  - Current playing track number, played time.
- At the end of the disc, playback automatically continues with the next disc. Any missing disc is automatically skipped.

### SCAN TRACK

The scan function enables you to listen to the first 10 seconds of each track.

- Press **SCN** to activate/deactivate Scan track.
- Playback resumed by pressing **SCN** button again.

### PREVIOUS/ NEXT TRACK

- Press **▲** or **▼** button to select the next / previous track.
  - e.g.: press **▲** button--T03 to T04;
  - press **▼** button--T04 to T03.
- Playback resumes with the chosen track.

### FAST BACKWARD / FORWARD

- Press **◀◀** or **▶▶** button to quickly move rewind or forward through the disc.
- Normal playback resumes when you press the same button again.

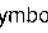 
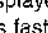 
## RANDOM TRACK PLAYBACK

- Press **RANDOM** button more than 2 seconds to enter Random track playback mode.
- Normal playback resumes when you long press the same button again.
- *Note: this function only valuable for the current playing disc tracks.*

### REPEAT TRACK

- Press **REPEAT** to more than 2 seconds to enter Repeat current track playback mode.
- Normal playback resumes when you long press the same button again.

### LOAD DISC

- Press **LOAD** button prepare to load disc,
- Displayer shows "WAITING", and  symbol blinks slowly.
- You can now insert disc only when displayer shows "INSERT", and  symbol blinks fast.
- Press button 1-6, select the desired tray for inserting the CD.
- *Press LOAD button for more than 2 seconds, you can load discs to each tray sequentially.*
- *Note: Only 1 disc for each tray are allowed.*

### EJECT DISC(▲)

#### In radio mode:

- Press **▲** button and indicator shows: SEL DISC.
- Press button 1-6 to select the desired tray.
- Disc ejected.
- *Press ▲ button for more than 2 seconds, you can eject discs from each tray sequentially.*
- *Press LOAD button to cancel current operation.*

#### In CD mode:

- Press **▲** button to eject current playing disc (default)
- You can also press 1-6 button to select the desired tray.
- Disc ejected.
- *Press ▲ button for more than 2 seconds, you can eject discs from each tray sequentially.*
- *Press LOAD button to cancel current operation.*

### CARE OF DISC

- Avoid making fingerprints on the disc when you take it out.
- Put the disc back in its box immediately after eject it, to protect the disc from dirty and dust.
- Do not expose the disc to heat or direct sunlight.

## SETUP

It is possible to modify many of the set's initial settings according to your preferences.

- Press **SET** button for more than 2 seconds to enter the **SETUP** menu.
- Press **▲** or **▼** button to select one of the option you want to modify.
- Press **SET** button to alter the choice.
- Press **SET** button for more than 2 seconds to leave the **SETUP** menu.

The set automatically leaves the **SETUP** mode about 1 minute after your last operation.

Option (▲ or ▼)	Choice (SETUP)	Usage
TIME	[OFF, 12H, 24H]	Select the desired clock format. (See 'SETTING THE CLOCK').
RADIO	[EUROPE, AMERICA LATAM, ASIA]	Select the tuner according to European, Latin America, USA or Asia standards.
FM	[06, 12, 18]	Select number of presets in FM mode.
MW (AM)	[ON, OFF]	Select 'OFF' to suppress MW (AM) when not in use.
MW (AM)	[6, 12]	Select number of presets in MW (AM) mode.
TUN	[AUTO, MAN]	Select auto or manual tuning for tuner.
SRCH	[LO, DX]	Select 'LO' if you wish to search only for strong stations during automatic tuning to a frequency.
CDC	[-2, -1, 0, +1, +2,]	Volume level of CD changer relative to tuner.
BEEP	[-2, -1, 0, +1, +2,]	Select volume level of confirmation beeps.
PHONE	[TEL NO, PHONE LO, PHONE HI TELIN LO, TELIN HI]	- Select 'TEL NO' if no car phone is connected to the set. - Select 'PHONE LO'/'PHONE HI'/'TELIN LO'/'TELIN HI' according to car phone.
LOGI	[OFF, ON]	Select 'ON' to limit the use of the set to one hour when the car ignition is switched off. Select 'OFF' to prevent the set from turning on when the car ignition is switched off.
REMOTE CONTROL [Y,N]		Select Y if remote controller connected, or N if not.

**Note :** Reference volume can be adjusted by the volume knob during the **SETUP** mode. e.g.: the volume when you turn the set on will always be the reference volume no matter the volume is higher or lower than the reference volume while you turn off the set.

## CHECK BEFORE REQUESTING SERVICE

There may be times when you suspect that your car radio is not functioning as you expect it to. Before calling for service please read the operating/installing instruction and check the following list, you may find that an apparent malfunction can easily be rectified.

### SYMPTOMS

### POSSIBLE CAUSE / REMEDY

#### GENERAL

Set does not function, no display	•Check fuse and connections
Set functions but with no or poor sound	•Adjust volume of set to demute set •Check fader and balance settings •Check the aerial and its connection

Set front feels warm	Some heat is always generated by the set
Display shows "TOO HOT", Volume is no function, The sound from the speaker is reduced	A built-in safety circuit prevents the temperature in the set from exceeding a certain level •Wait until "TOO HOT" disappears from the display to increase the volume.

#### RADIO

Poor radio reception	•Check that the aerial is fully extended and properly connected •Check that the negative terminal is connected to earth(car-chassis)
----------------------	---

#### CD player

Display shows 'NO CD' or 'CD ERROR' and hearing a "beep"	•No CD inserted, CD inserted upside-down, damaged, dirty, wrong disc type
Distorted sound during playback	•CD damaged or dirty

If you still have to send your set for service, always send the complete set.  
*Do not try to open the set to service it yourself*

# RECOMMENDED CD USAGE OF THE IN-DASH CD CHANGER

## 前置碟盒的光碟使用指示

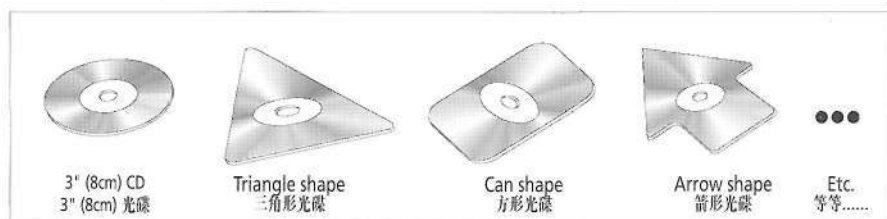
The In-Dash CD Changer mechanism is very sophisticated and delicate.

If you insert the following discs, it may not eject the discs and/or may damage the mechanism.

前置碟盒的机芯结构复杂，设计精良，如果把下列光碟插入碟盒，将可能导致无法退碟并/或损坏机芯。

### 1. Small size, irregular shape discs.

尺寸过小以及形状不规则的光碟。



### 2. Excessive thickness discs.

超出厚度的光碟。



### 3. Damaged discs.

坏碟。



### 4. Poor quality discs.

劣质光碟。



\* Note: Do not insert two discs at the same time.

注意：不可同时入两张碟。