

CONTENT

1. READING INSTRUCTIONS.....	01
2. START AND CHARGE SYSTEM.....	02
3. ABS SYSTEM	03
4. A/C SYSTEM.	04
5.AUDIO SYSTEM	05
6.AIRBAG	06
7.INSTRUMENT SYSTEM	07
8.ENGINE SYSTEM	08
9.FRONT ISU SYSTEM	09
10.FRONT ISU SYSTEM	10
11.REAR ISU SYSTEM	11

READING INSTRUCTION

1. NO. of relay circuit:


- 30? Coming from storage battery
- 15? Controlling by ignition switch
- ACC? Ignition switch radio set
- 31? Ground
- 58b? Luminous regulating line

2. This circuit diagram is suitable to configuration of A21 1.6 and 2.0. Considering the time limit, it is liable to mistakes or omissions. Please contact with Service Technology Dep. of sales company if any unconformity is found.


TEL? 0553-5922392

FAX? 0553-5840795


START AND CHARGE SYSTEM

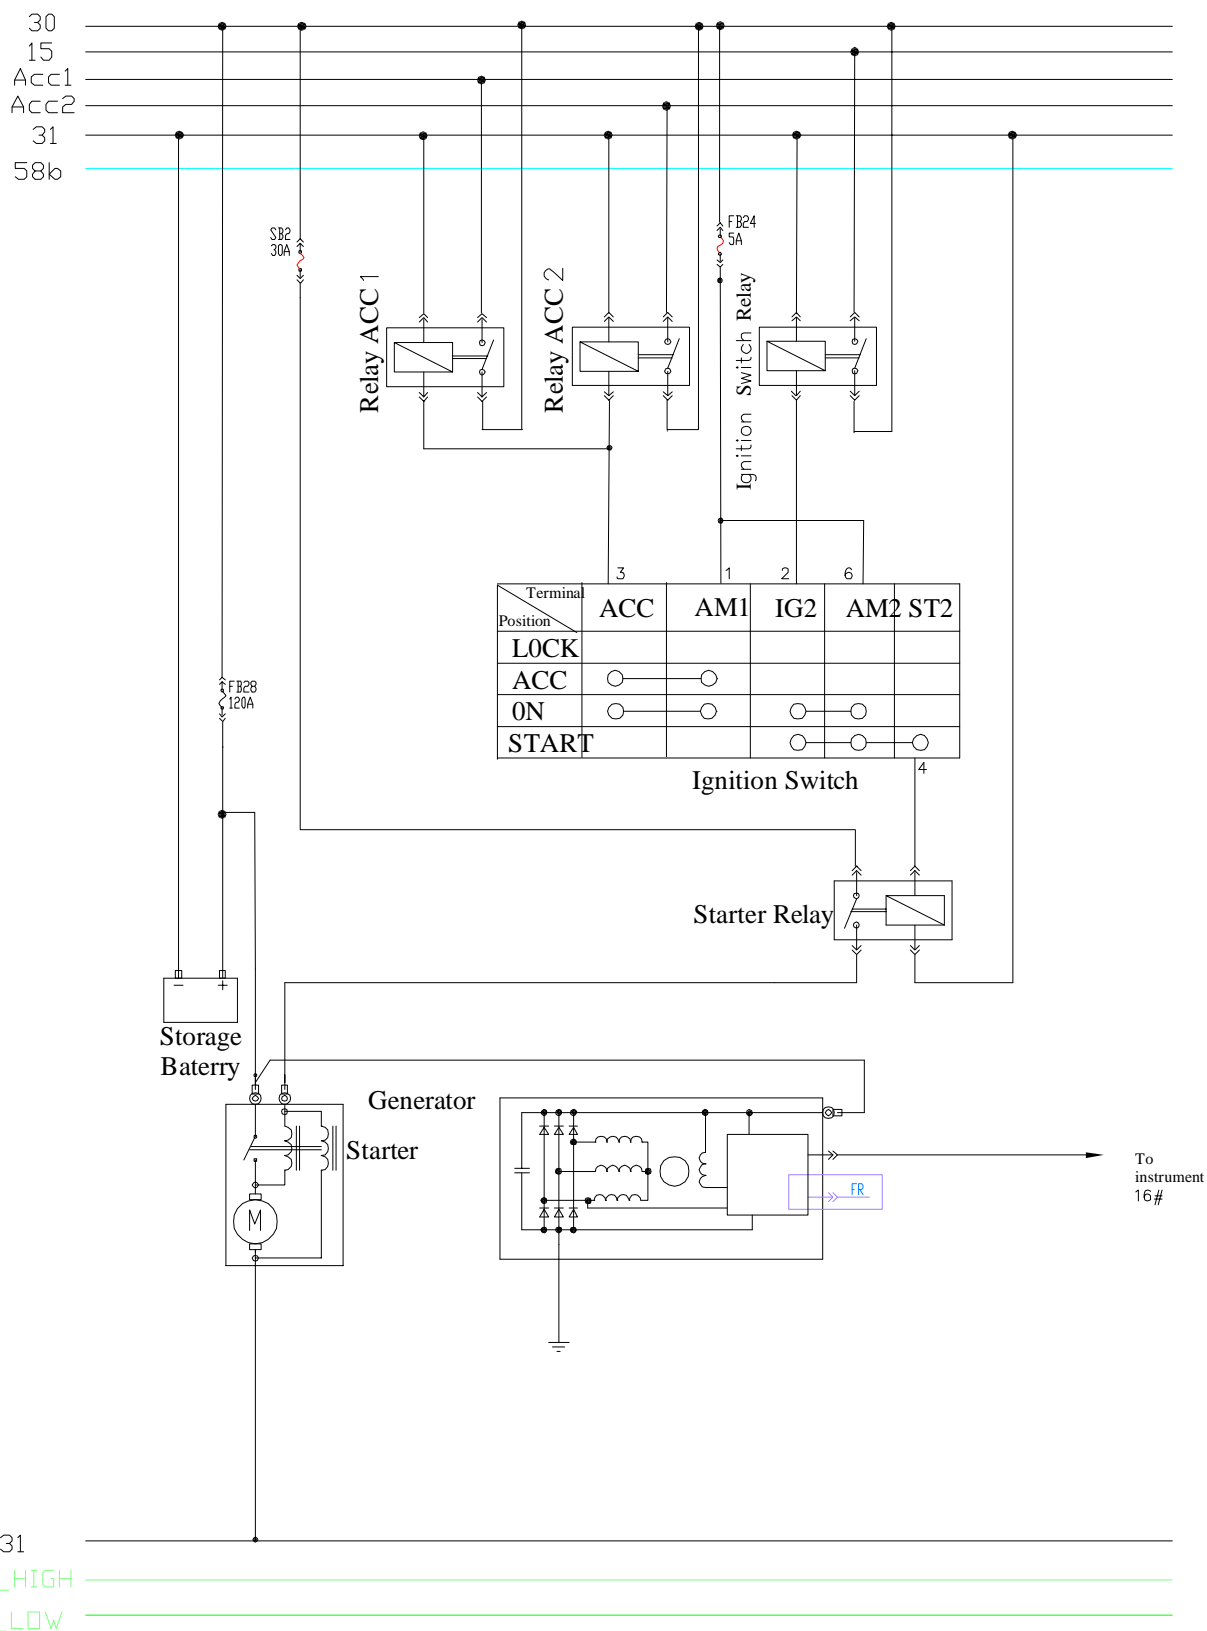


ABS SYSTEM

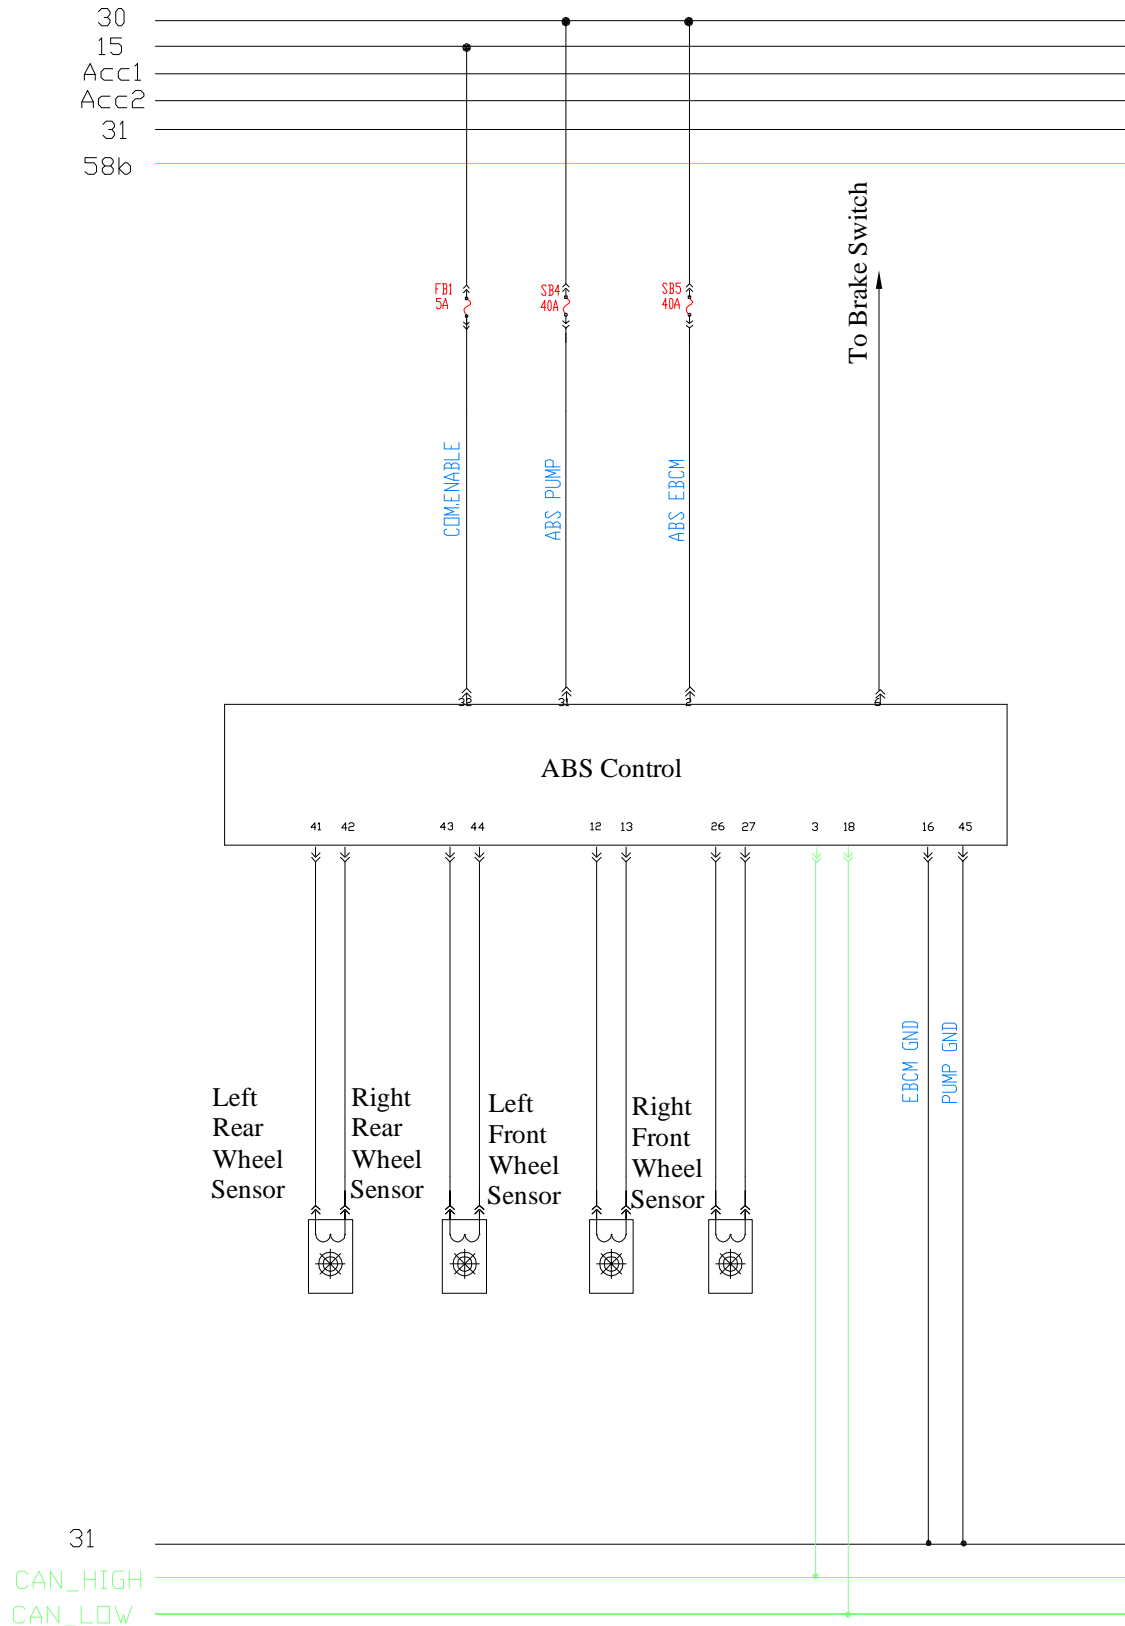


AIR CONDITIONING SYSTEM

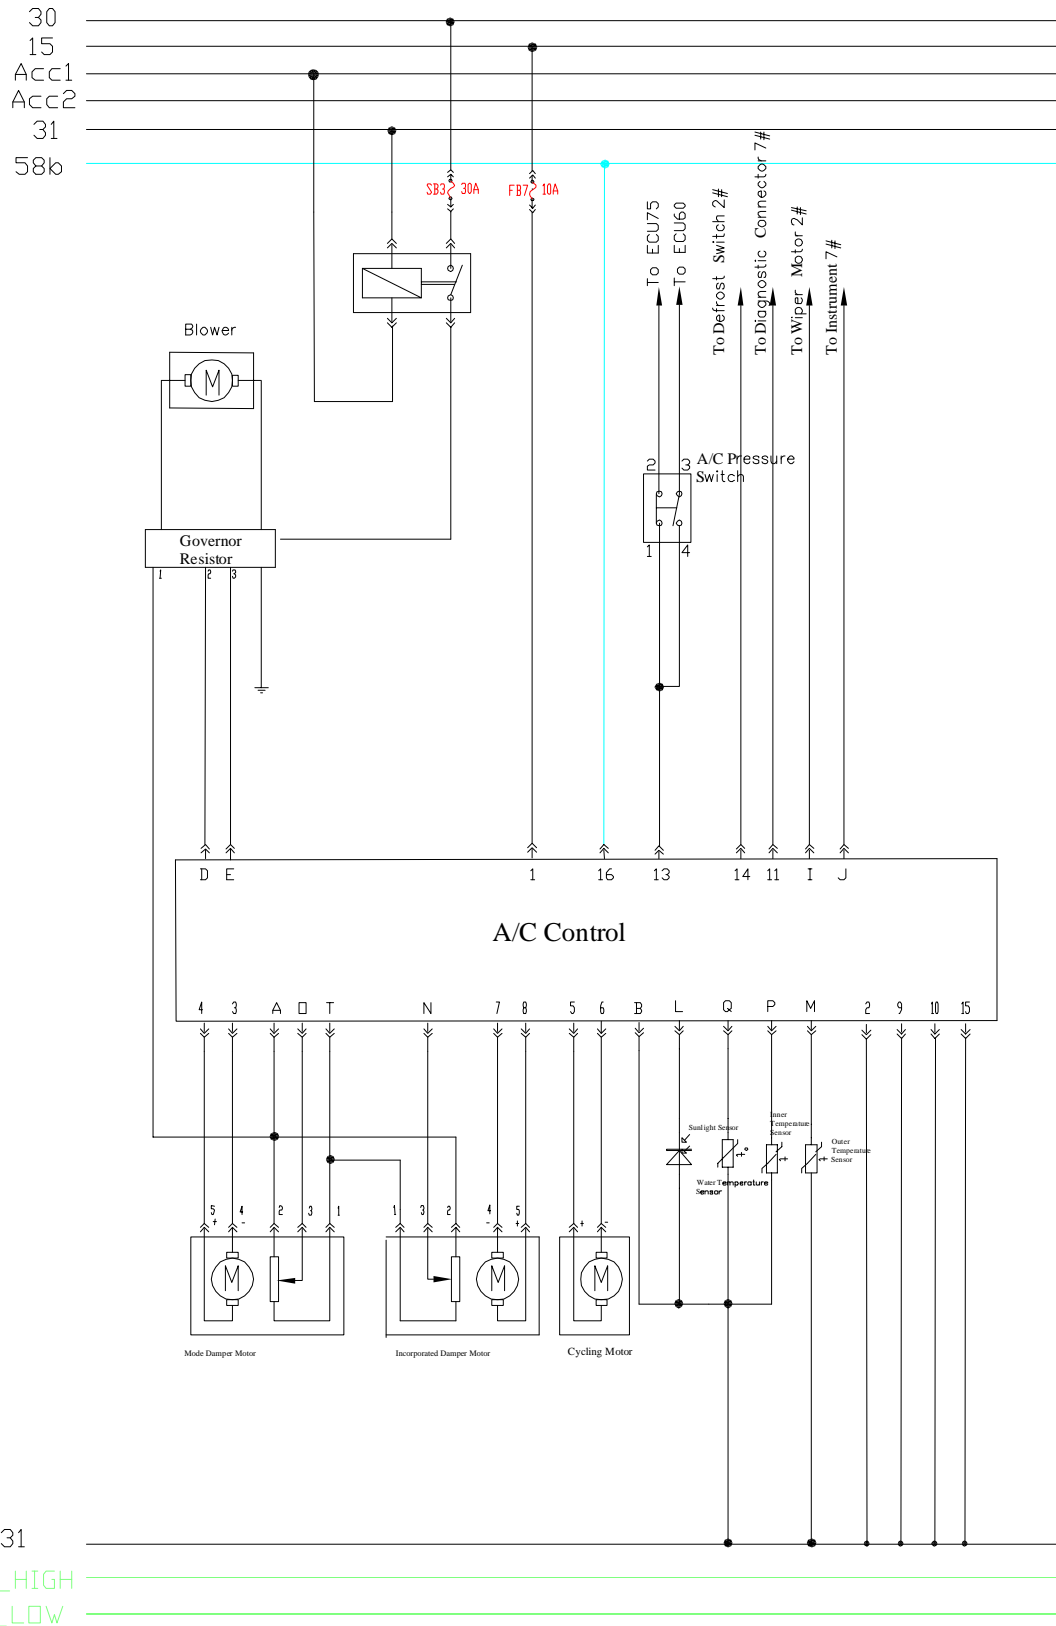


AUDIO SYSTEM

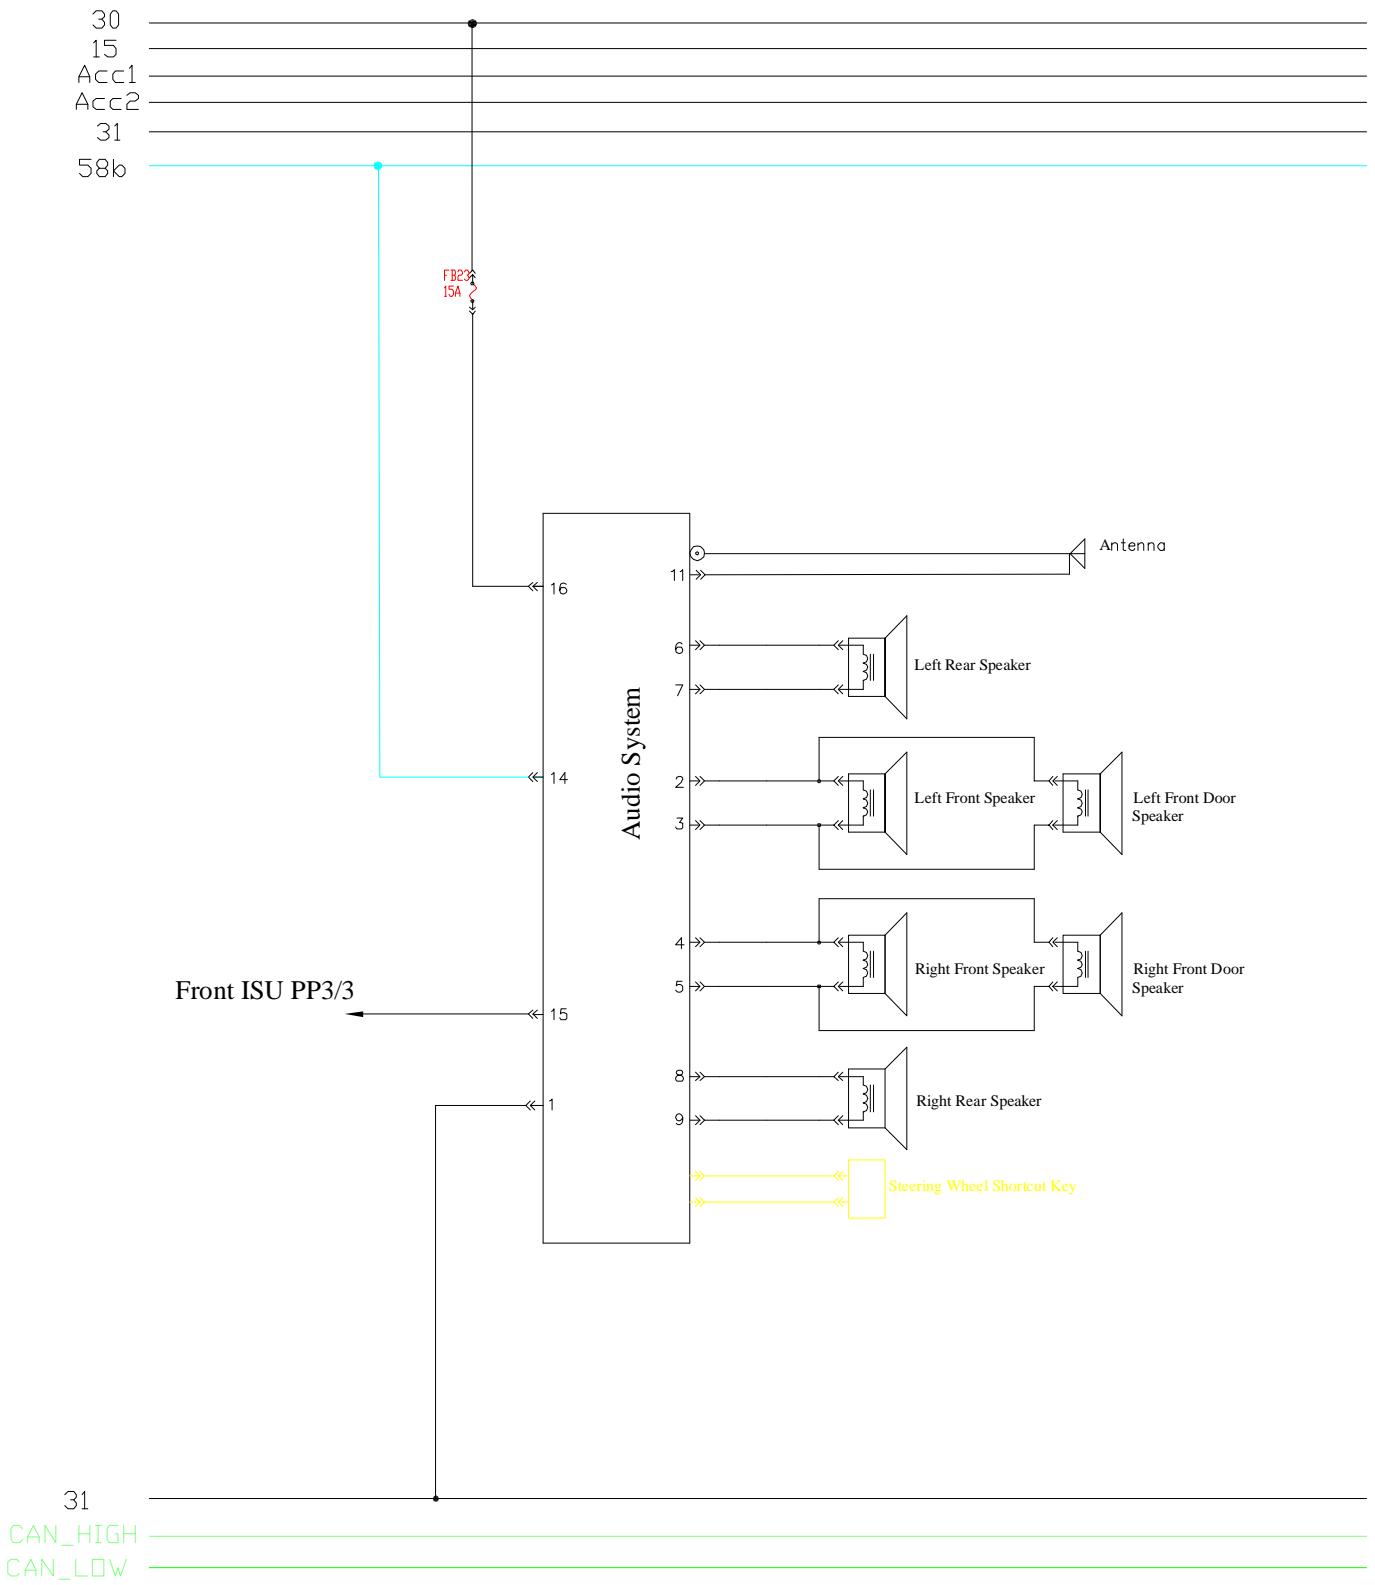

AIR BAG SYSTEM

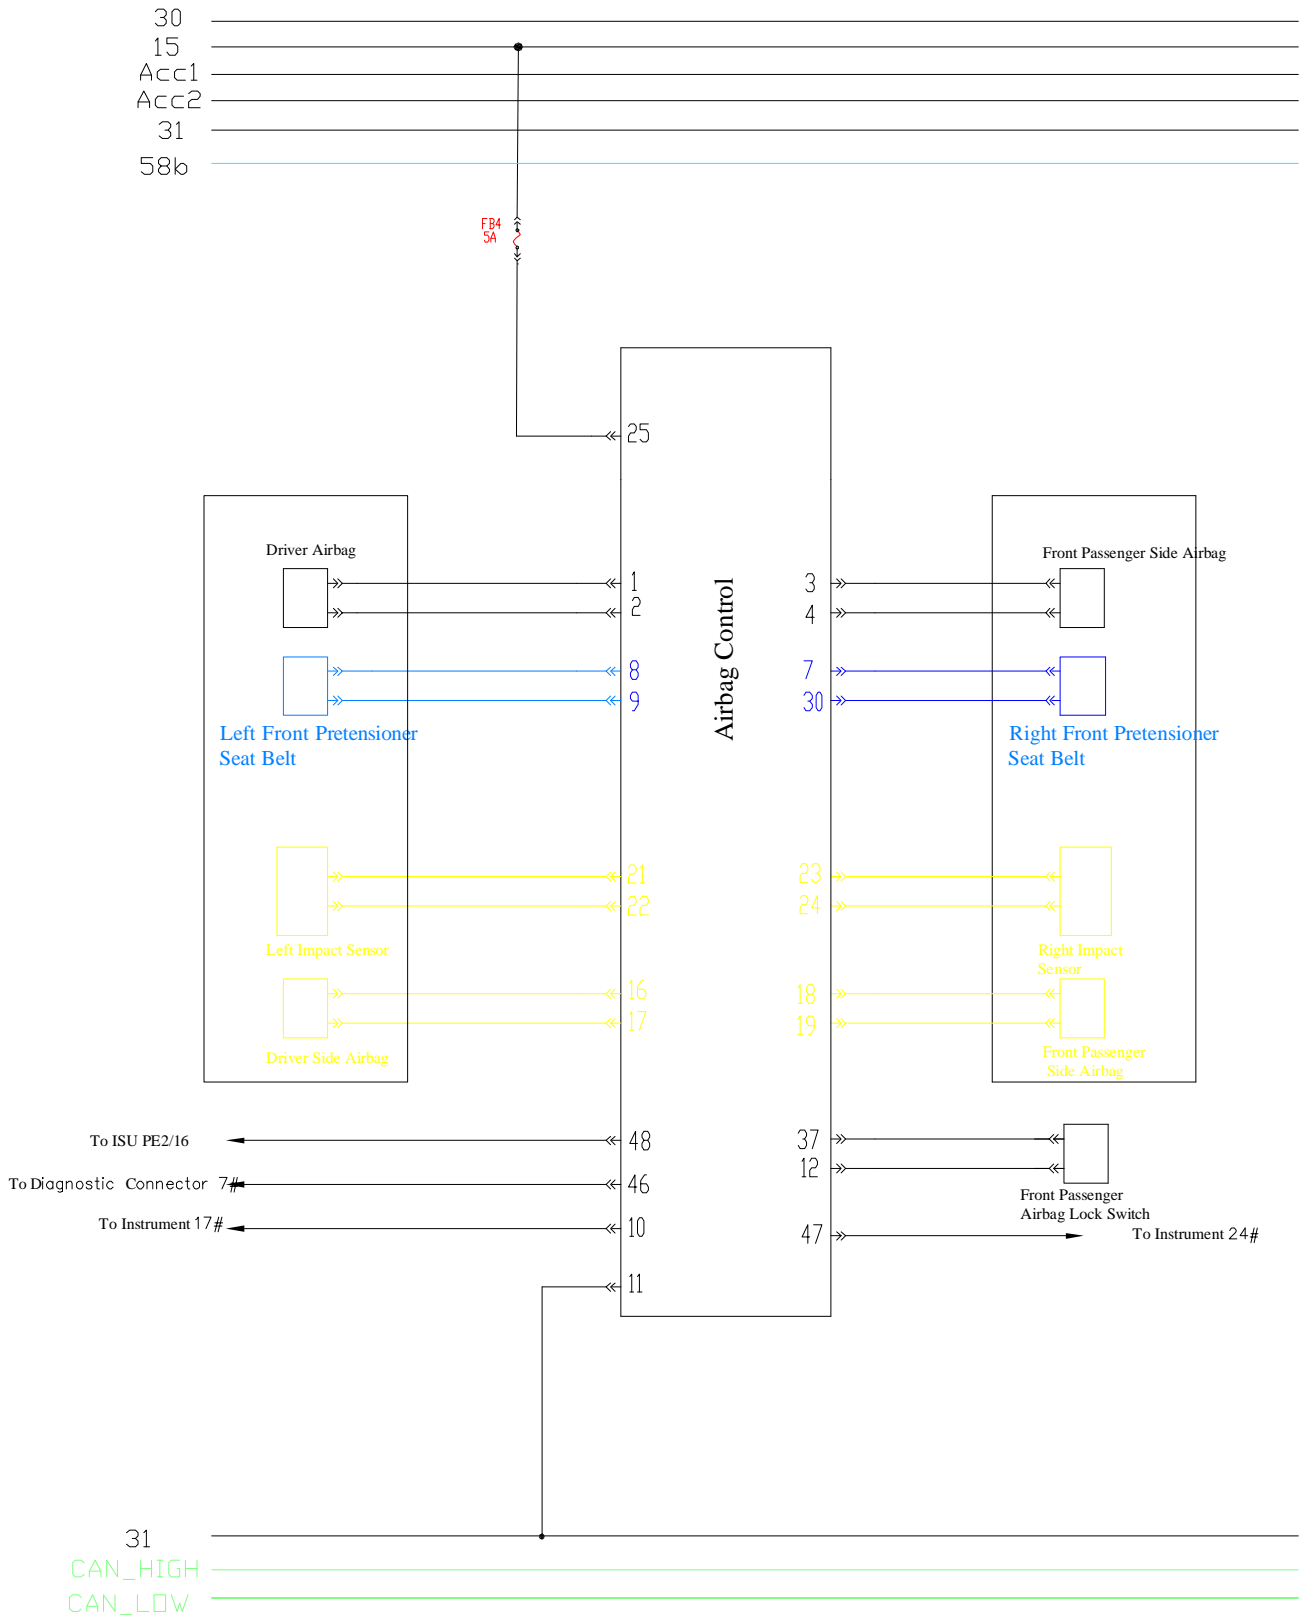


INSTRUMENT SYSTEM

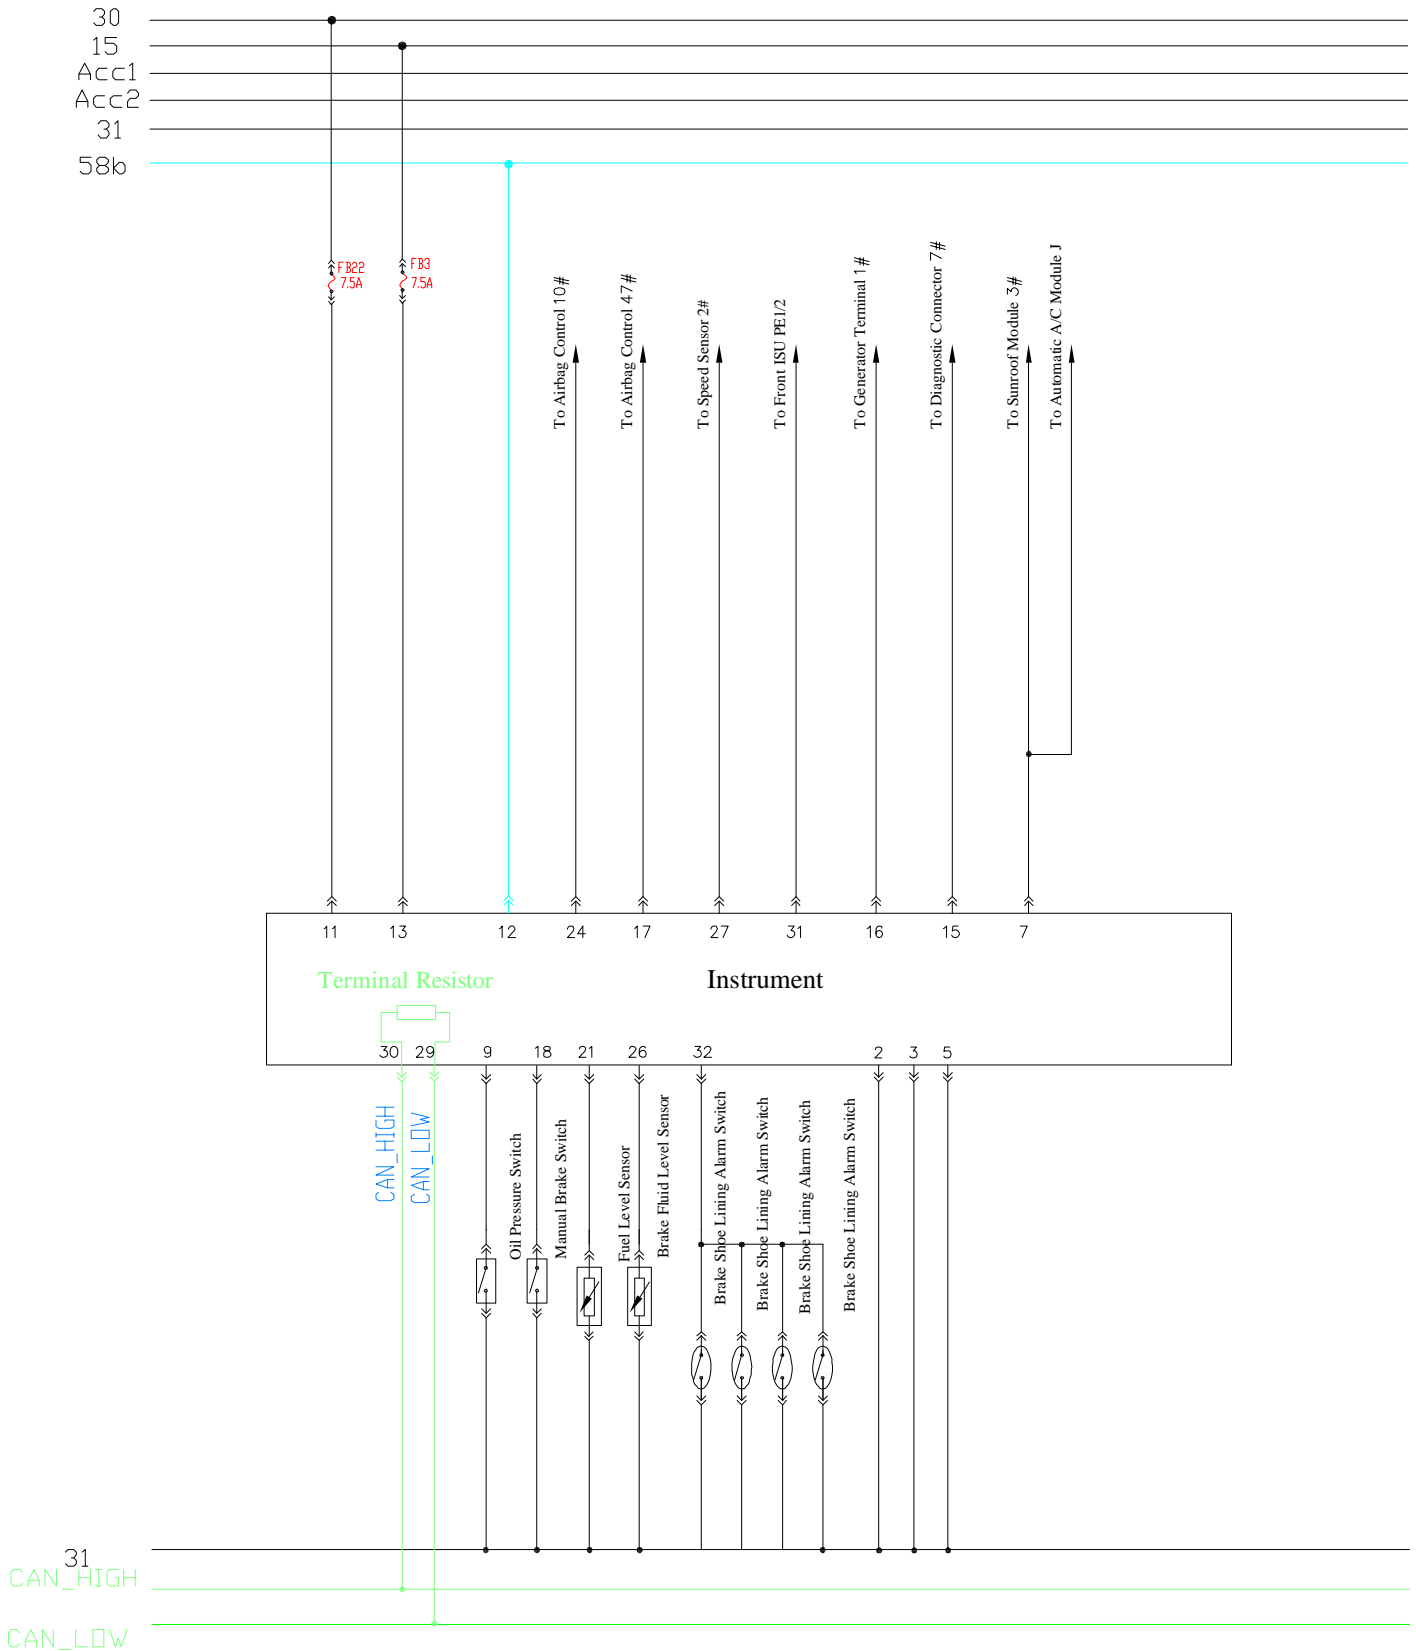



ENGINE SYSTEM


30
15
Acc1
Acc2
31
58b

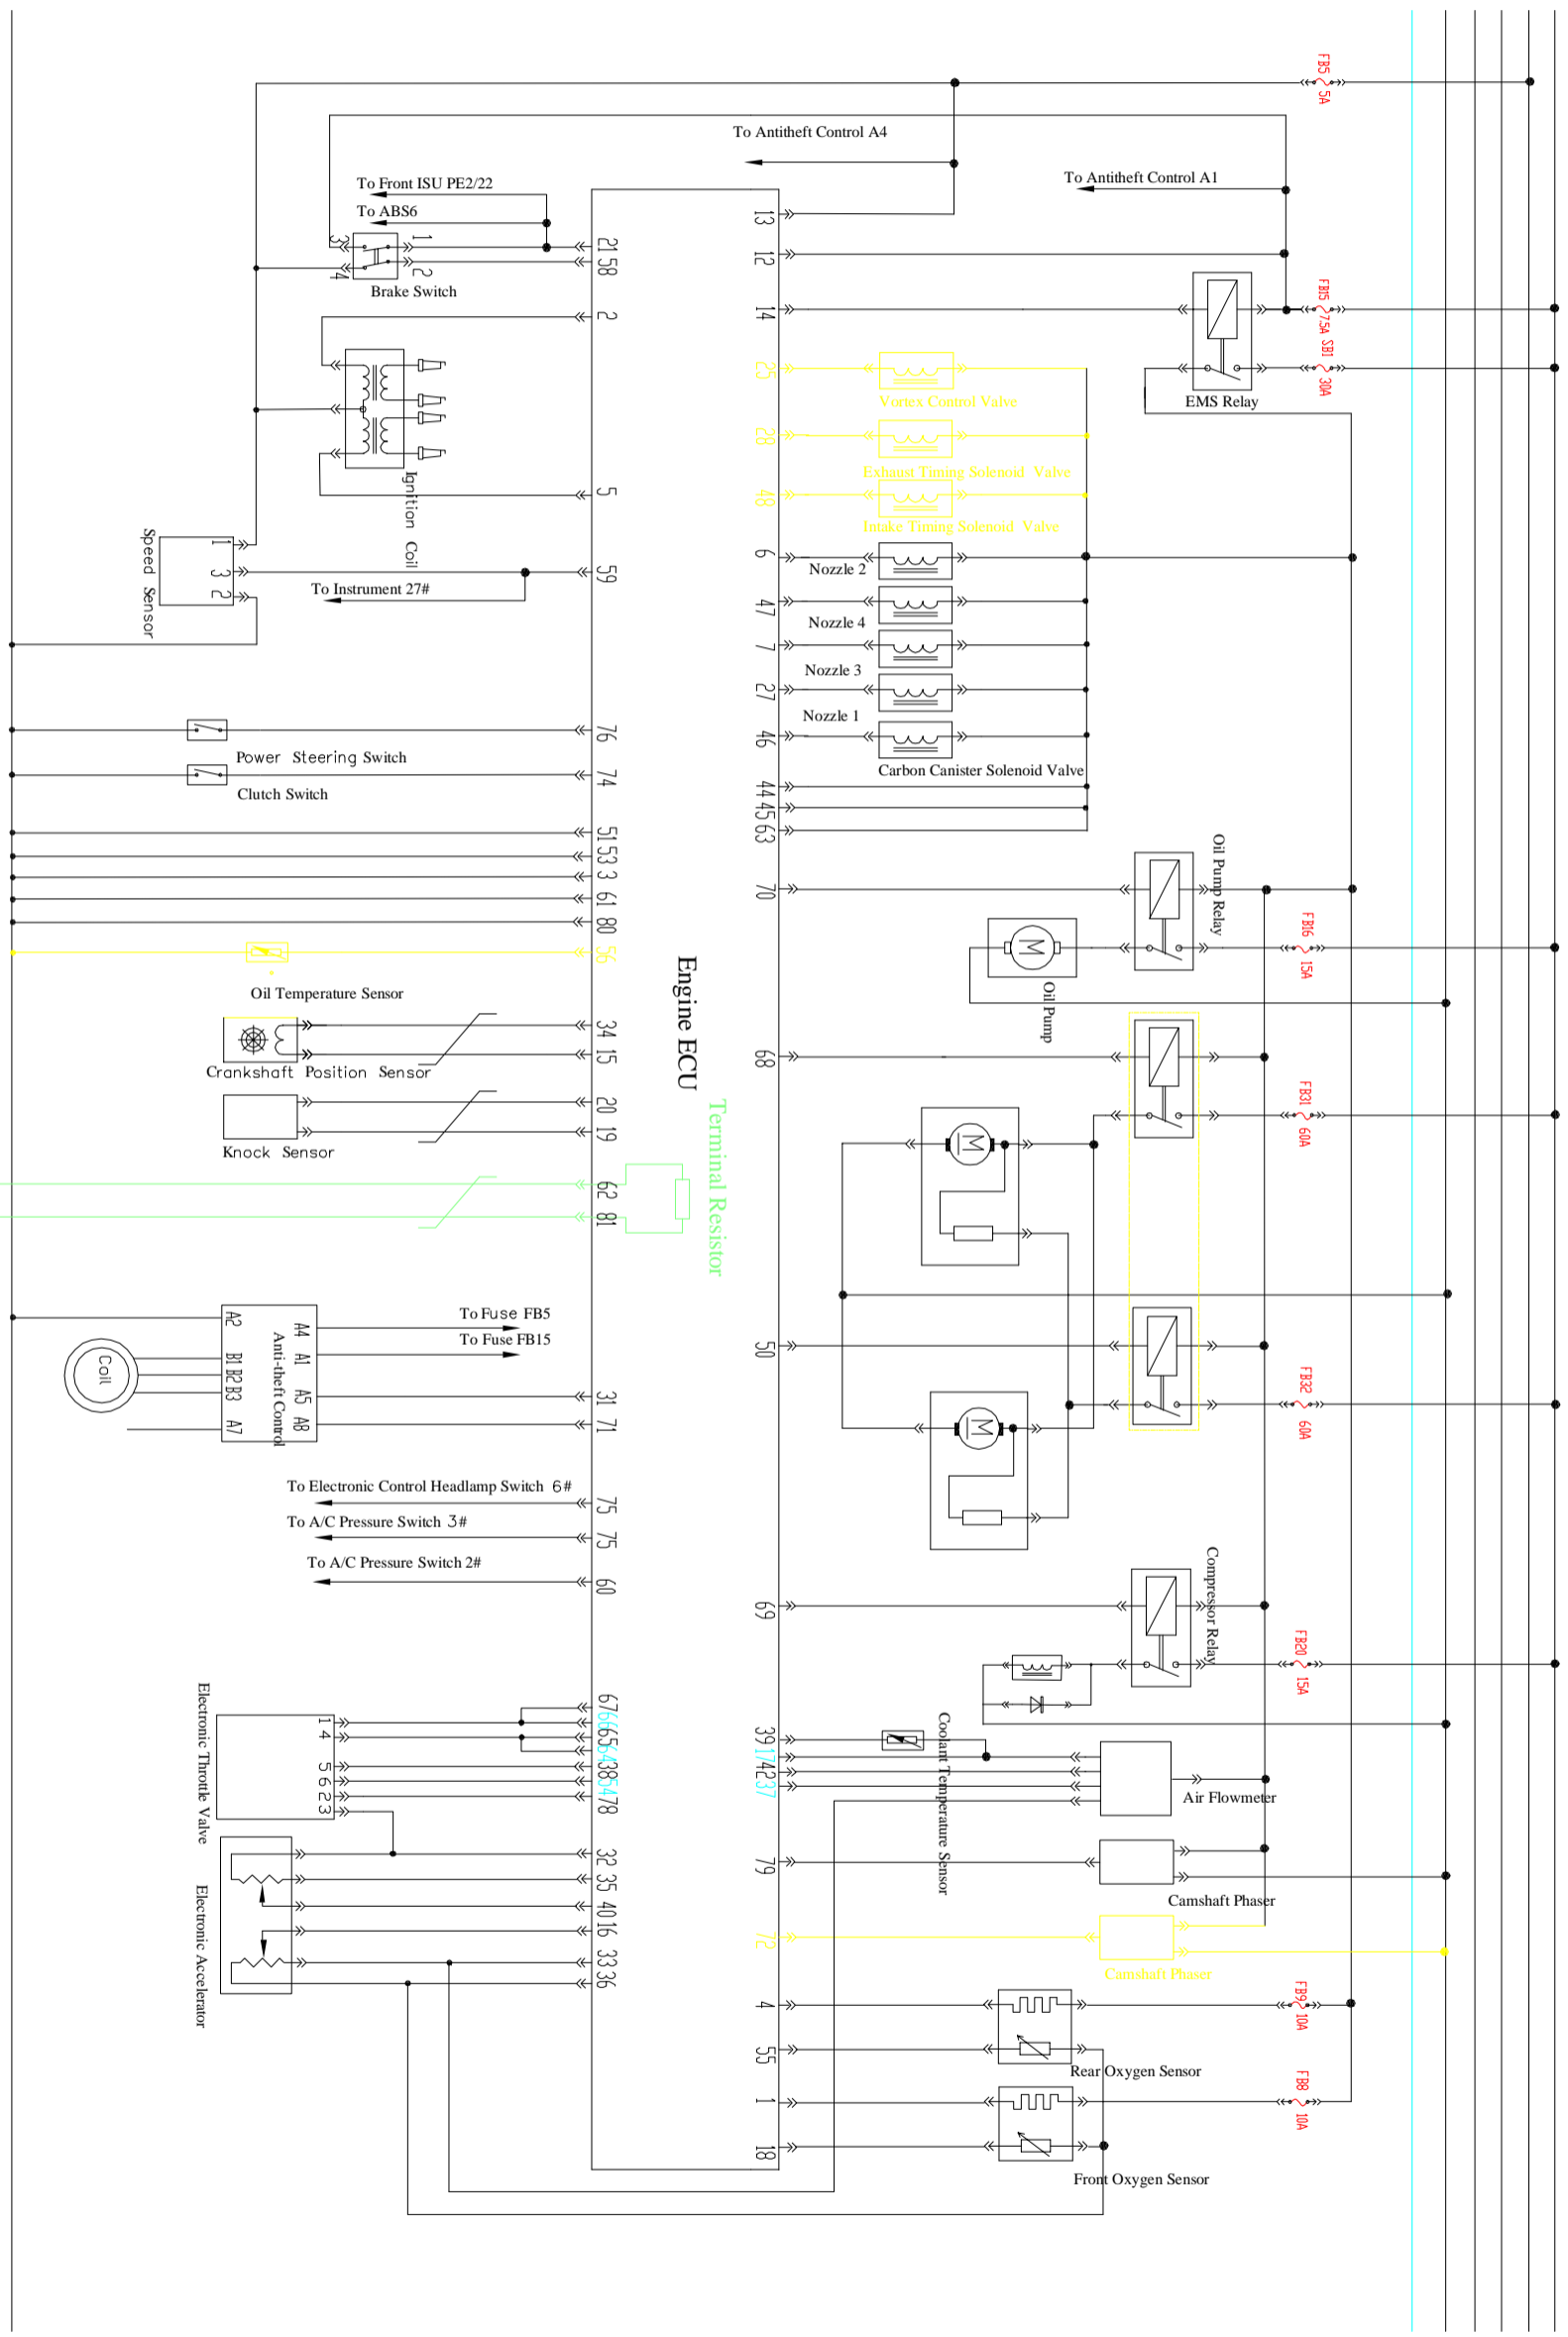

31
CAN_HIGH
CAN_LOW




FRONT ISU

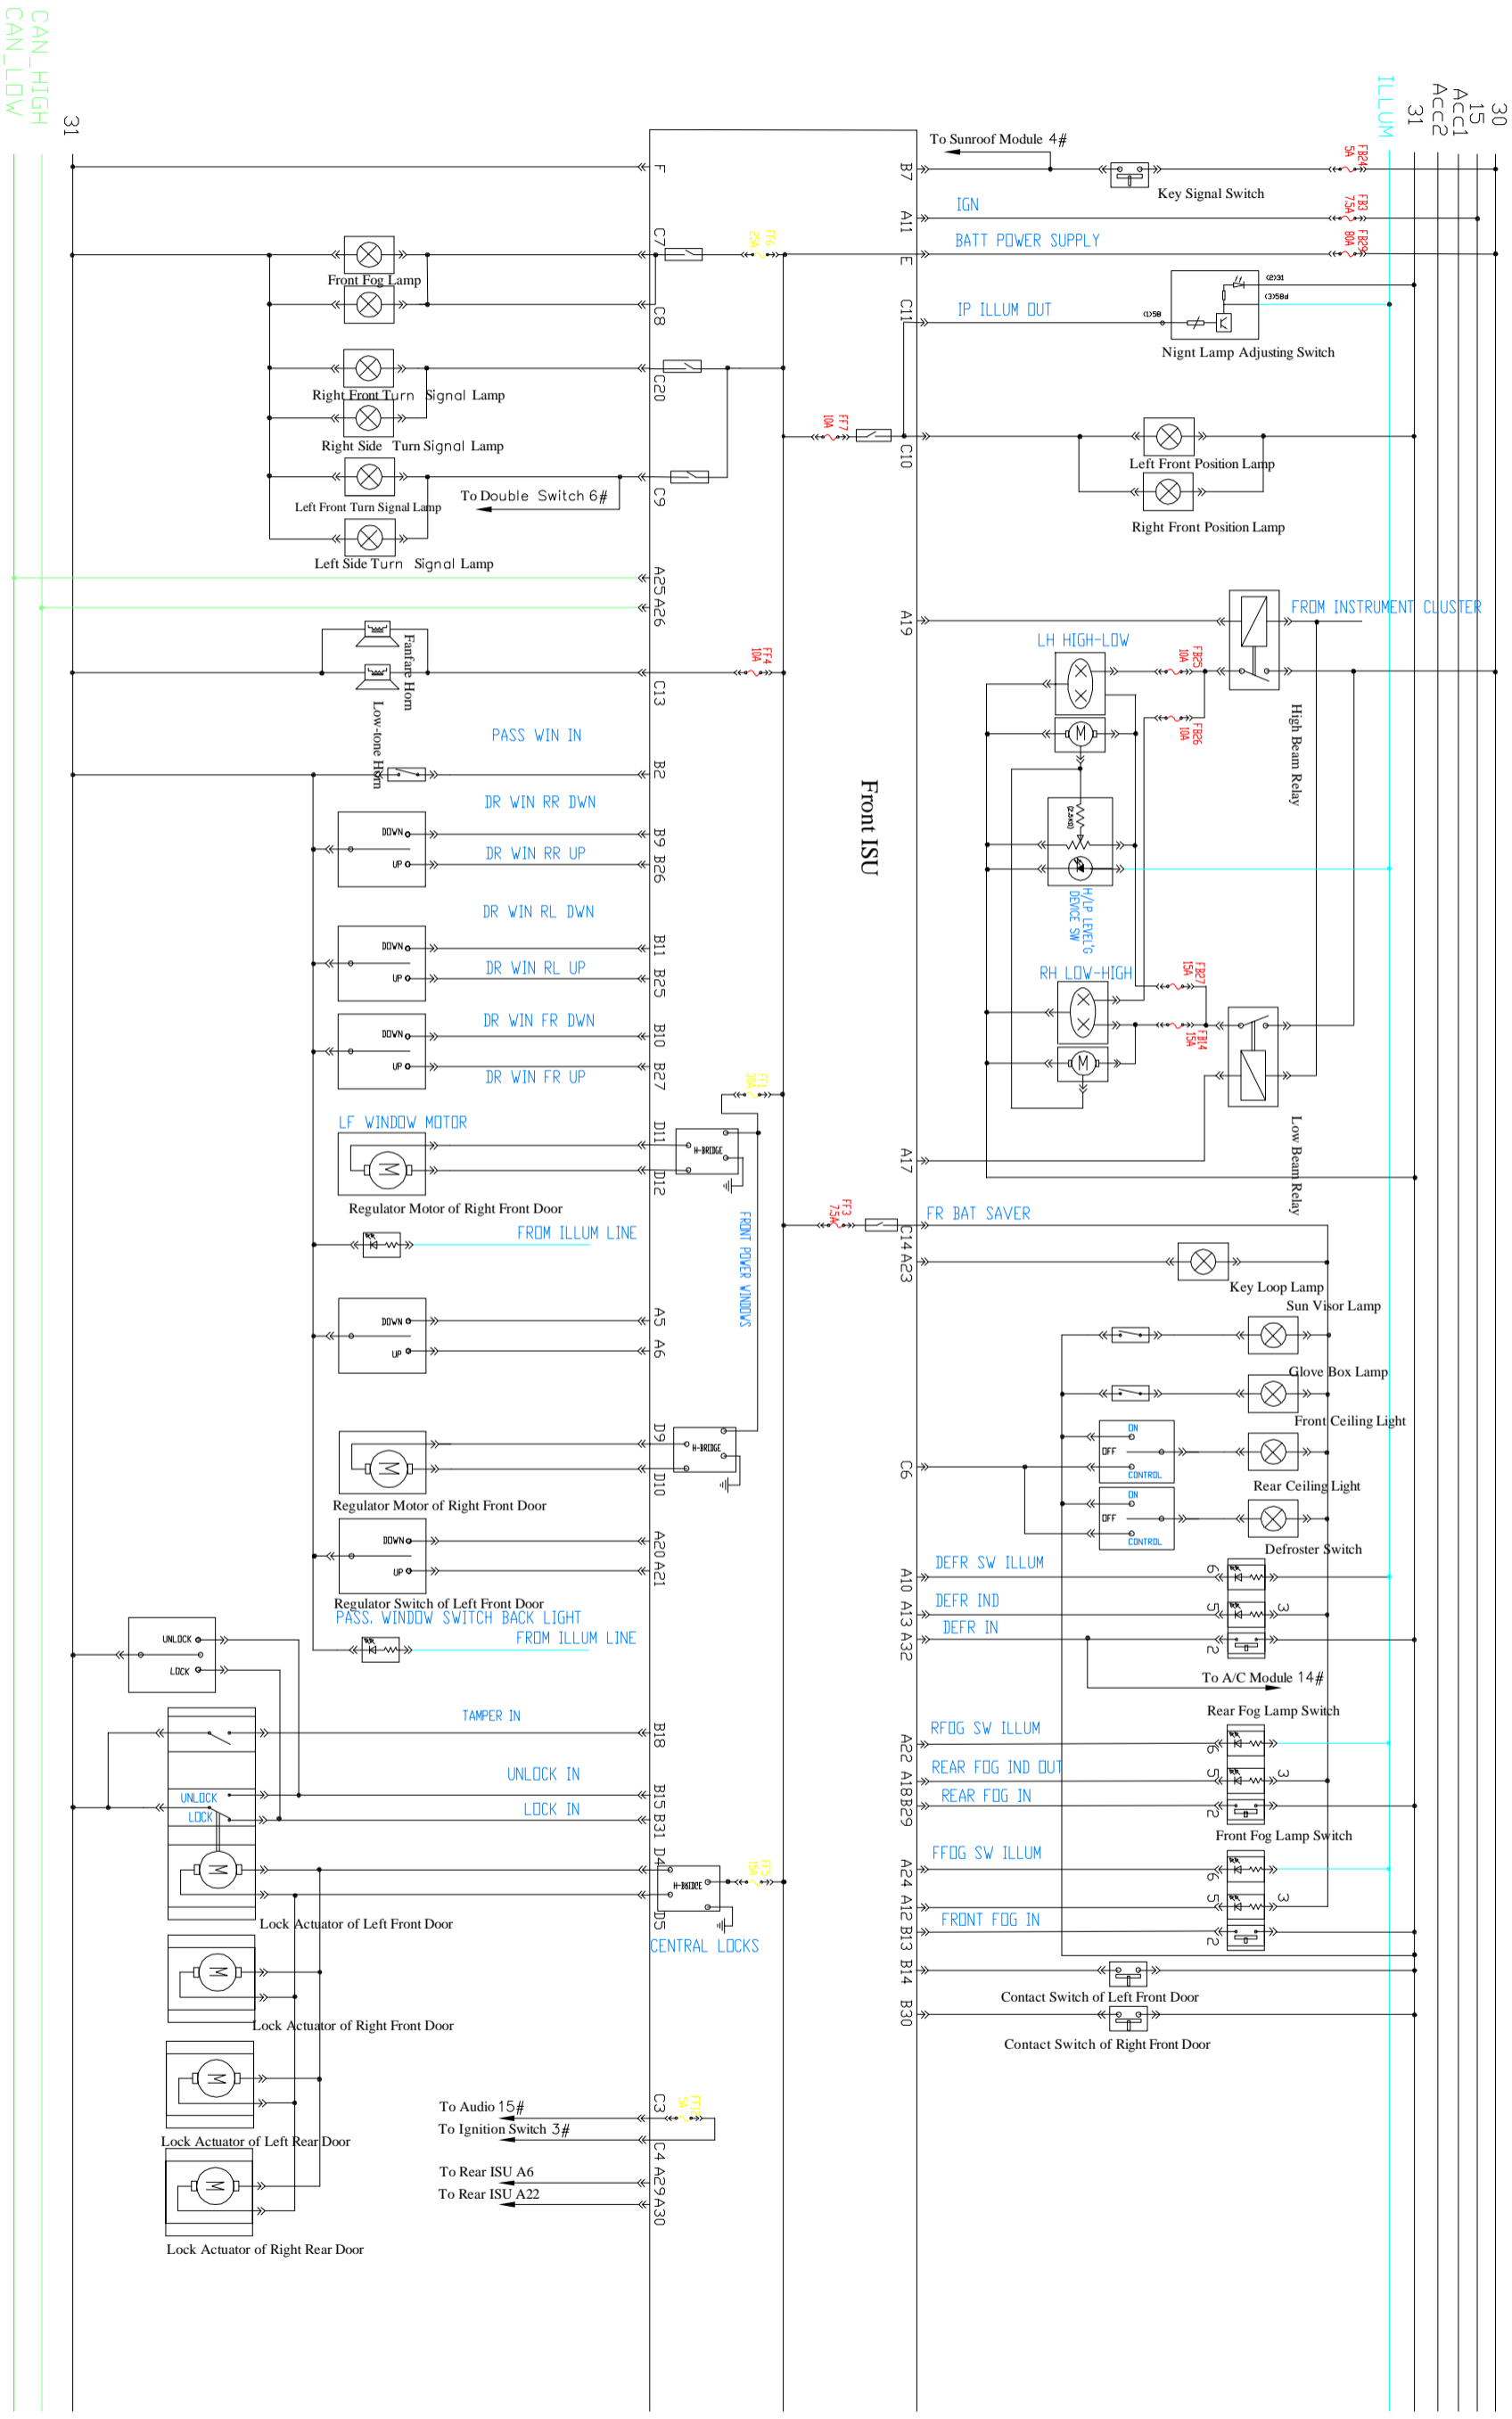



FRONT ISU

30
ACC1
ACC2
31
ILLUM

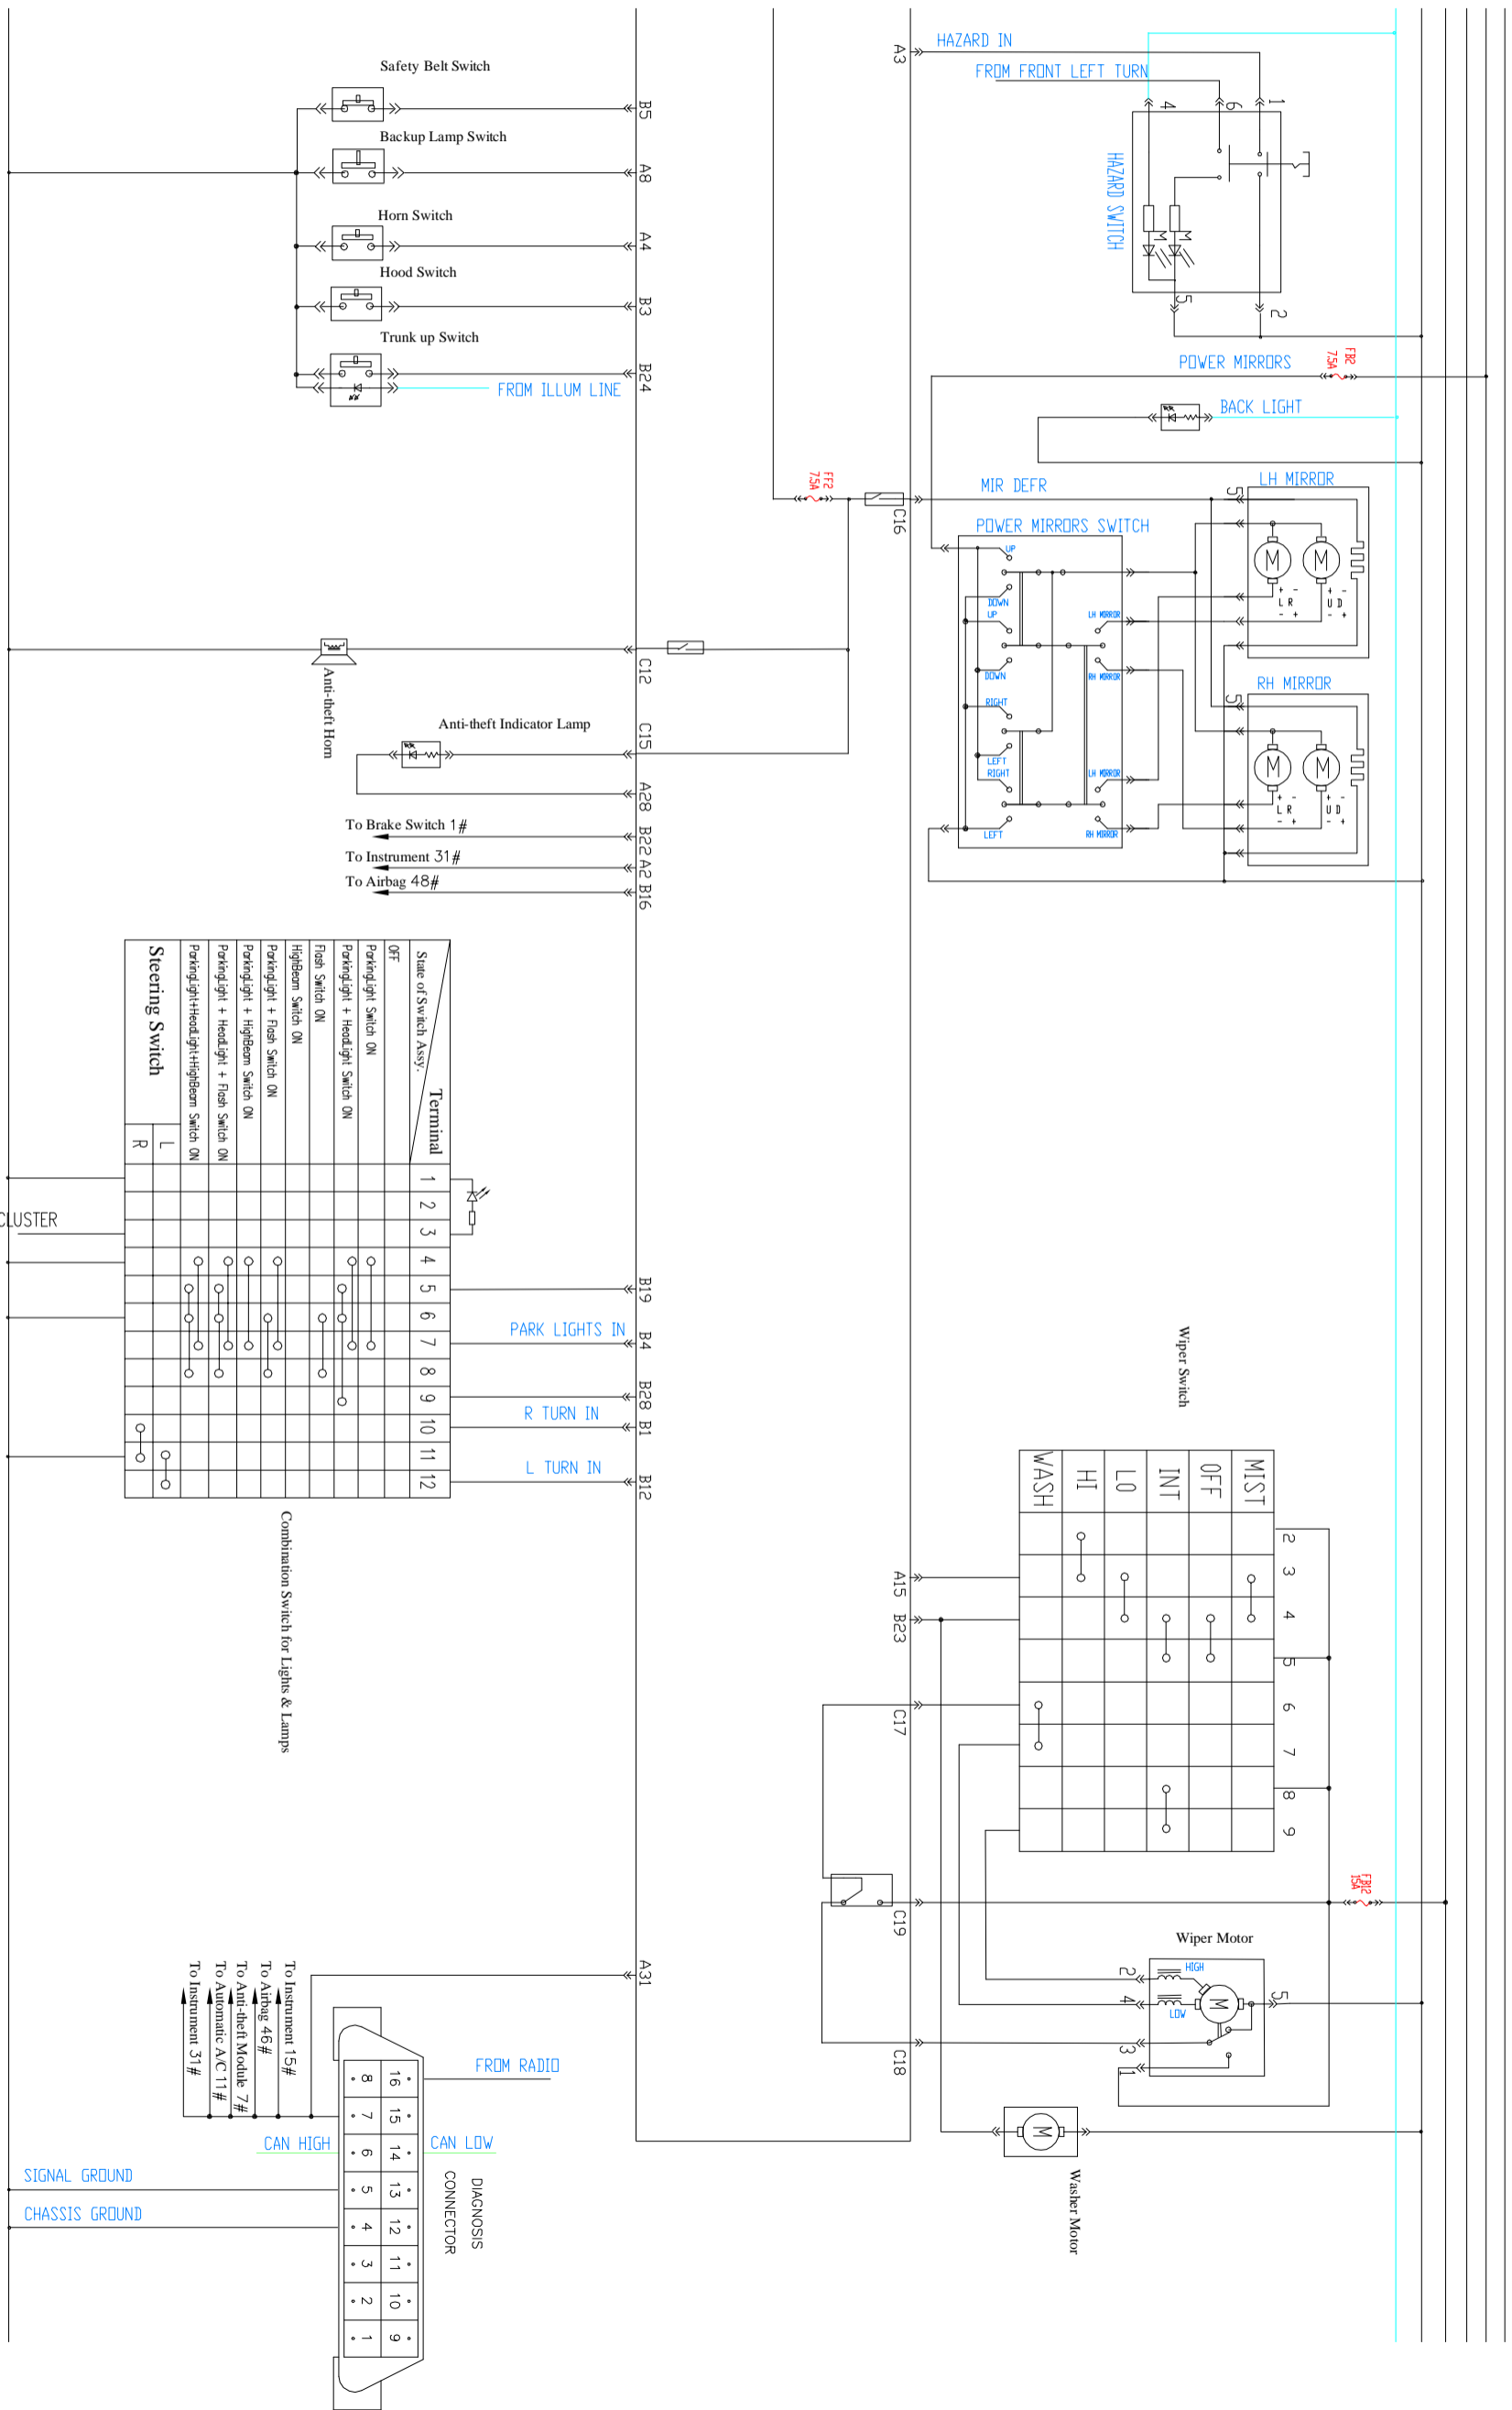


Terminal	1	2	3	4	5	6	7	8	9	10	11	12
State of Switch Assy:												
OFF												
Parkinglight Switch ON												
Parkinglight + Headlight Switch ON												
Flash Switch ON												
Highbeam Switch ON												
Parkinglight + Highbeam Switch ON												
Parkinglight + Headlight + Flash Switch ON												
Parkinglight+Headlight+Highbeam Switch ON												
Steering Switch												
	L											
	R											

31
CAN_HIGH
CAN_LOW



REAR ISU SYSTEM

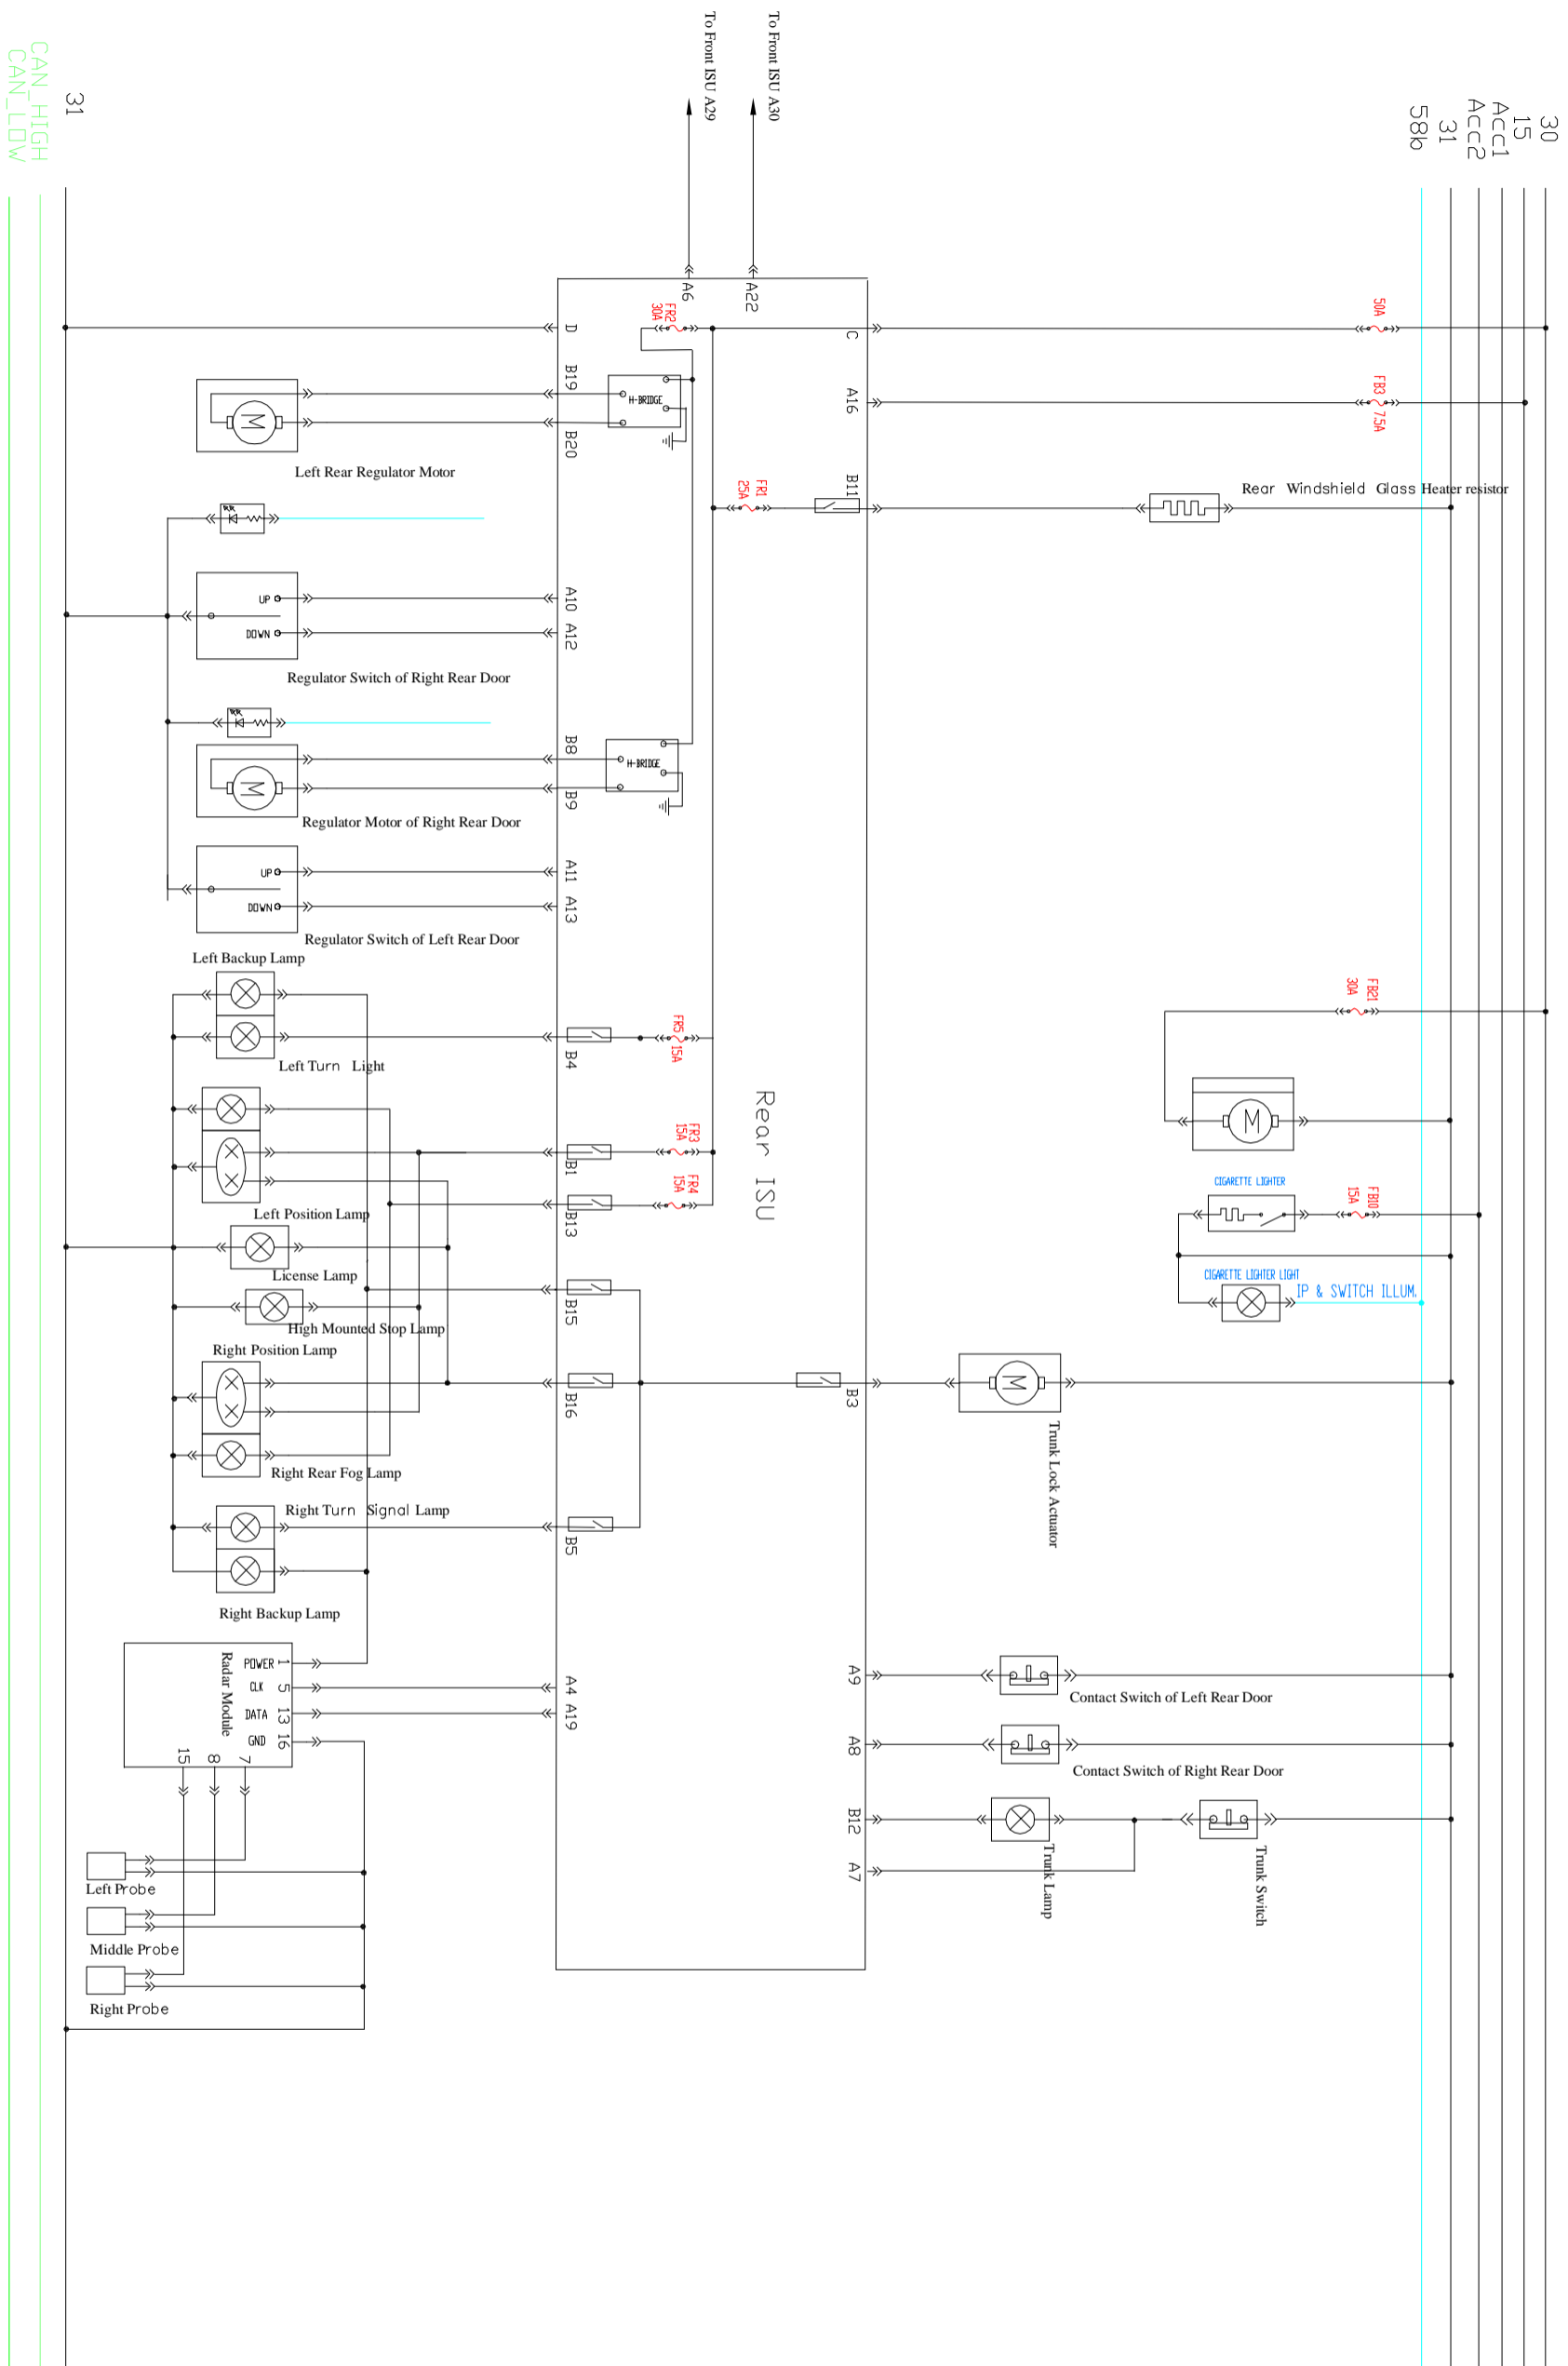

CAN_HIGH
CAN_LDW

31